

Keuze 1 Basis sokkel



Relaissokkel, 1-voudig
64811 U
3105316



Relaissokkel, 2-voudig
64821 U
3105323



Led-dimmersokkel, 1-voudig
64851 U
3105344



Jaloeziesokkel, 1-voudig
64831 U
3105981



Nevenpostsokkel
64891 U
3105358



E-sokkel, 1-voudig
64814 U
3105330

Keuze 2 Taster



Sensor 1-voudig
64711
5399013



Sensor 2-voudig
64721
5399020

Keuze 3 Afdekking



1-voudig
6230-10-xxx
9758761* 9096840**
9096574*** 1593642****



1-voudig
6232-10-xxx
9758775* 9096868**
9096616*** 1594279****



2-voudig (2x nodig)
6230-20-xxx
9758796* 9096910**
9096679*** 1593761****



2-voudig (2x nodig)
6232-20-xxx
9758810* 9096938**
9096721*** 1594391****

Schakelprogramma

xxx = 914 Balance SI
xxx = 214 Reflex SI
xxx = 84 Future Linear studiowit
xxx = 885 Future Linear mat zwart

Schakelprogramma

* = Balance SI
** = Reflex SI
*** = Future Linear studiowit
**** = Future Linear mat zwart

Bewegingsmelder



Busch-comfortschakelaar®
64765-xxx
5399034* 5399027**
5399041***



Bewegingsmelder basic-sensor
met selectlens
64761-xxx
3105379* 3105351**
3105386***



Bewegingsmelder comfortsensor
met selectlens
64762-xxx
3105428* 3105393**
3105435***



Bewegingsmelder comfortsensor
met multilens
64764-xxx
3105463* 3105449**
3105470***



Scan de QR-code
voor meer informatie
over Busch-flexTronics®

Busch-free@home-flex®

Smart Room

Keuze 1 Basis sokkel



Relaissokkel, 1-voudig
64811 U
3105316



Relaissokkel, 2-voudig
64821 U
3105323



Led-dimmersokkel, 1-voudig
64851 U
3105344



Jaloeziesokkel, 1-voudig
64831 U
3105981



E-sokkel, 1-voudig
64814 U
3105330

Keuze 2 Taster



Sensor 1-voudig, wireless
62711-WL
5506225



Sensor 2-voudig, wireless
62721-WL
5506232

Keuze 3 Afdekking



1-voudig
6230-10-xxx
9758761* 9096840**
9096574*** 1593642****



1-voudig
6232-10-xxx
9758775* 9096868**
9096616*** 1594279****



2-voudig (2x nodig)
6230-20-xxx
9758796* 9096910**
9096679*** 1593761****



2-voudig (2x nodig)
6232-20-xxx
9758810* 9096938**
9096721*** 1594391****

Schakelprogramma

xxx = 914 Balance SI
xxx = 214 Reflex SI
xxx = 84 Future Linear studiowit
xxx = 885 Future Linear mat zwart

Schakelprogramma

* = Balance SI
** = Reflex SI
*** = Future Linear studiowit
**** = Future Linear mat zwart

Bewegingsmelder



Bewegingsmelder comfortsensor
met selectlens, wireless
62762-xxx-WL
5506085* 5506078**
5506113*** 5506134****



Bewegingsmelder comfortsensor
met multilens, wireless
62764-xxx-WL
5506162* 5506155**
5506190***



Scan de QR-code
voor meer informatie
over Busch-free@home-flex®